

2500 / 3500 / 3800 / 4100

Service Guidelines

1. Filters must be checked and changed periodically:
 - a. Hydraulic fluid filter must be changed after the first 50 hours and every 200 hours thereafter.
 - b. Engine oil filter must be changed after the first 50 hours and every 200 hours thereafter.
 - c. Engine air filter must be changed after every 200 hours of use.
 - d. Engine fuel filter must be changed after every 200 hours of use.
2. All grease points must be checked and greased on a weekly basis.
3. Fiberglass boom & other fiberglass accessories must be inspected for stress cracks each time the machine is to be used and kept clean to assure their dielectric stability.
4. Rope must be inspected for wear each time the unit is to be used and kept clean to assure dielectric stability.
5. Crane attachment bolts need to be inspected on a weekly basis to assure a safe working environment.
6. Outriggers and outrigger arms & feet should be inspected for stress and overloading each time the unit is to be used.
7. Tracks / Tires should be inspected for wear and checked for looseness each time the unit is to be used, grease and tighten as necessary.
8. Machine should be looked over carefully for hydraulic leaks each time the machine is to be used.
9. Remote should be fully charged each time the machine is to be used.
10. Make certain the hydraulic fluid is “topped off” and at a safe working level, use the sight gauges and or the dip-stick to determine the proper fluid level.